

PRIOR TO INSTALLATION, PLEASE READ THE ENTIRE INSTALLATION INSTRUCTIONS

THIS PRODUCT MUST BE INSTALLED AND MAINTAINED BY A CERTIFIED ELECTRICIAN.

CONSULT WITH THE MANUFACTURER BEFORE CONDUCTING ANY MAINTENANCE.

TURN OFF THE POWER BEFORE INSTALLATION AND MAINTENANCE.

HANDLE THE PRODUCT WITH CARE.

MAKE SURE THE CONSTRUCTION IS STRONG ENOUGH TO SUPPORT THE PRODUCTS.

MAKE SURE THE PRODUCT IS SECURELY INSTALLED.

THE HOUSING MIGHT BECOME HOT AFTER OPERATION.

THE PRODUCT MUST BE GROUNDED.

THE PRODUCT IS SUITABLE FOR WET LOCATIONS.

THE FIXTURE SHALL, UNDER NO CIRCUMSTANCE, BE COVERED WITH INSULATION MATTING OR SIMILAR MATERIAL OR BE DIRECTLY MOUNTED IN GENERAL INSULATION MATTING SURFACE.

THE EXTERNAL FLEXIBLE CORD OF THIS LUMINAIRE CANNOT BE REPLACE. IF THE FLEXIBLE CORD IS DAMAGED, THE LAMP SHOULD BE SCRAPPED.


THE PRODUCT IS NOT INTENDED FOR NORMAL HOUSEHOLD USE.

THE LIGHT SOURCE OF THIS LUMINAIRE IS NOT REPLACEABLE; WHEN THE LIGHT SOURCE REACHES ITS END OF LIFE, THE WHOLE LUMINAIRE SHOULD BE REPLACED.

PLEASE NOTE — THE FIXTURE IS EQUIPPED WITH STANDARD SURGE PROTECTION ONLY. TO PROTECT THE FIXTURE FROM SAGS, SURGES AND LIGHTNING STRIKES, ADDITIONAL SURGE PROTECTORS MUST BE DEPLOYED ON THE PRIMARY SIDE.

INCLUDED HARDWARE


	(3) BURIED TYPE-L SCREW
	(1) SCREW FIXED PLATE
	(3) M10 HEXAGONAL NUT
	(3) FLAT GASKET (Ø11 × Ø18 × 2 mm)
	(3) SPRING GASKET (Ø10.5 × Ø15 × 2.3 mm)
	(1) 4mm INNER HEXAGON SPANNER
	(1) SPANNER
	(1) REMOTE CONTROL

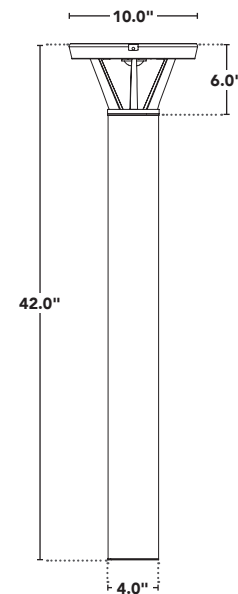


SL-SBL-5L-FC-BK-G2

INSTALLATION — DISCONNECT FROM POWER BEFORE INSTALLATION

 
1. TAKE THE FIXTURE OUT OF THE PACKAGING AND CHECK TO MAKE SURE ALL PARTS ARE INCLUDED




4. INSTALL THE BODY OF THE FIXTURE TO THE BASE WITH THE SCREWS

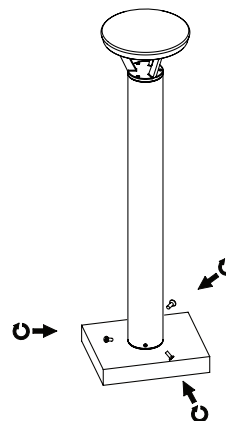


2. UNSCREW THE (3) COUNTERSUNK HEAD SCREWS AND REMOVE THE BASE OF THE FIXTURE

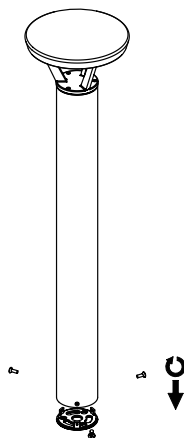


5. USE THE REMOTE CONTROL TO ADJUST THE CCT TO DESIRED SETTING

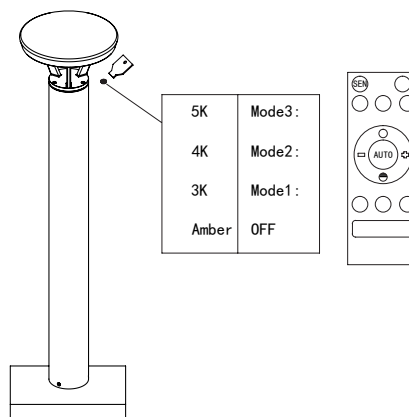

3. PASS THE INPUT WIRE THROUGH THE BASE AND INSTALL THE BASE TO THE BURIED TYPE-L SCREWS AND SECURE WITH THE HEX NUTS

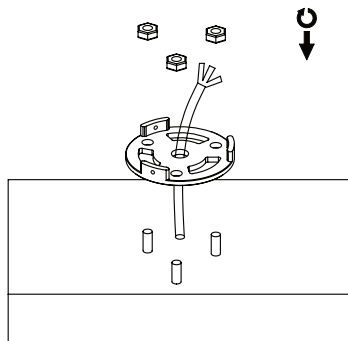


6. INSTALLATION COMPLETE

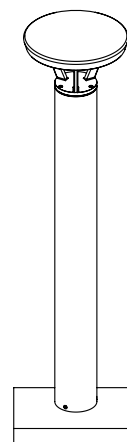


INSTALLATION — DISCONNECT FROM POWER BEFORE INSTALLATION


1. USE A SCREWDRIVER TO LOOSEN THE THREE SCREWS OF THE LAMP AND THEN REMOVE IT

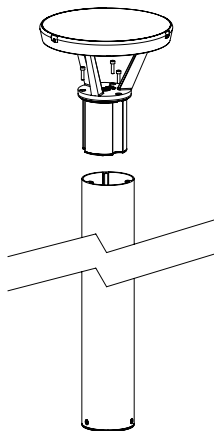


4. THEN FOLLOW THE ILLUSTRATION TO REINSTALL THE COTTON PAD AND THE COVER PLATE, AND LOCK THEM IN PLACE

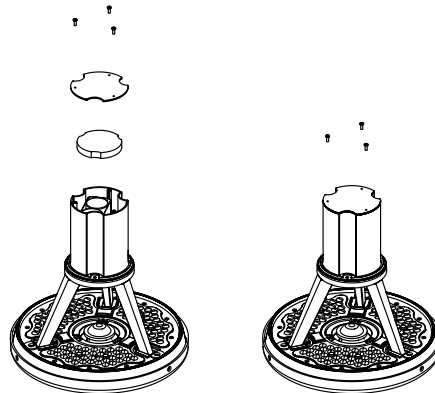


2. USE A SCREWDRIVER TO LOOSEN THE THREE SCREWS OF THE COVER PLATE, THEN REMOVE THE COVER PLATE AND THE COTTON PAD ONE BY ONE

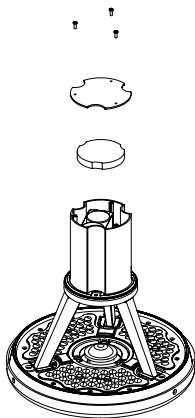


5. FINALLY, INSTALL THE LAMP BACK ONTO THE BODY AND SECURE IT TIGHTLY

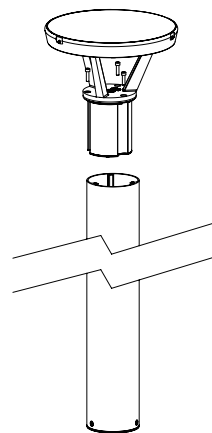

3. REMOVE THE BATTERY AND UNPLUG THE QUICK CONNECTOR. THEN CONNECT THE NEW BATTERY INSTEAD

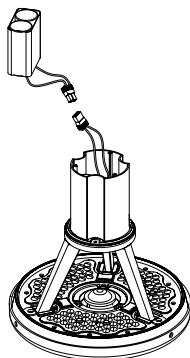

 6. INSTALLATION COMPLETE



REMOTE CONTROL OPERATION



SEN

SWITCH BETWEEN NIGHT CONSTANT MODE AND NIGHT MOTION SENSING MODE

Press **SEN** button, the fixture blinks once to switch to bright w/ motion at night. Press **SEN** button again, the fixture blinks twice to switch to constant on at night.

AMB

3K

4K

5K

CCT SELECT

Press **AMB** / **3K** / **4K** / **5K** button to select the desired CCT.

NIGHT CONSTANT MODE CONTROLS

Press  button, the light will remain at 100% brightness.

Press **-** button, to lower the brightness by 10% at a time.

Press **+** button, to increase the brightness by 10% at a time.

Press  button, the light will remain at 100% brightness.

M1

M2

M3

AUTO

MOTION SENSOR MODE

Press **M1** / **M2** / **M3** / **AUTO** button to select the desired mode.

	INDUCTION TIME	LIGHT OUTPUT / NO MOTION	LIGHT OUTPUT / MOTION SENSED
MODE 1 (M1)	4 HOURS	60%	100%
	10 HOURS	80%	100%
MODE 2 (M2)	3 HOURS	80%	100%
	2 HOURS	60%	80%
	9 HOURS	10%	80%
MODE 3 (M3)	14 HOURS	25%	80%

ON

OFF

MANUAL ON/OFF

Press **ON** / **OFF** button(s) to control the light manually.
(only works in Night Constant mode)